



Ref No	Part No	Description	Ref No	Part No	Description
1	501885	T.H.S.C.S. 1/4-20 x 1/2	45	501092	Dust Cover
2	501896	Flat Washer	46	501972	Bolt
3	501899	Deflector	47	501091	Air Plug
4	501901	Bolt	48	501939	Belt Hook
5	501902	Cap	49	501938	Hex S.H.C.S.
6	501903	Seal	50	501998	Spring Pin
7	501904	Spring, Main Valve	51	501931	Spring Pin
*8	501905	O-Ring	52	501089	Urethane Retainer
9	501906	Head Valve Piston	53	501963	Steel Channel
10	501907	O-Ring	54	501966	Safety B
11	501908	Collar	55	501967	Safety Spring
12	501909	Packing	56	501968	E-Ring
13	501910	Piston Ring	57	501969	Adjust Shaft
14	501911	O-Ring	58	501387	Spring
15	501912	Driver Blade	59	501970	Safety A
16	501920	Cylinder Press Ring	60	501971	No Mar Tip
17	501913	O-Ring	61	501951	Latch Cover
18	501914	Cylinder	62	501950	Spiral Pin
19	501915	Cylinder Ring	63	501949	Front Latch Handle
20	501916	Cylinder Spacer	64	501948	Front Latch
21	501917	O-Ring	65	501947	Driver Guide Cover
22	501918	Bumper	66	501946	Spiral Pin
23	501919	Driver Guide	67	501940	Hex Soc.Hd.Bolt
24	501921	O-Ring	68	501941	Driver Guide Cover B
25	501922	O-Ring	69	501942	Driver Guide
26	501923	Plunger Cap	70	501943	Stopper Finger Spring
27	501930	Spring Pin	71	501944	Stopper
28	501924	Valve Plunger	72	501945	Fixed Pin
29	501925	O-Ring	73	501953	Pusher Spring
30	501926	O-Ring	74	501954	Pusher
31	501927	Spring	75	501955	Spring Pin
32	501928	Plunger	76	501952	Anchor Block
33	500999	O-Ring	77	501956	Negator Spring
34	501929	Trigger Valve Head	78	501960	Magazine Steel Cover
35	501932	Spring	79	501961	Counter Sunk Screw
36	501933	Trigger Unit	80	501959	Screw
37	501965	Tap Bolt	81	501958	Protecting Hood Cover
38	501962	Lock Nut	82	501962	Lock Nut
39	501964	Magazine B	83	501957	Magazine A
40	501961	Counter Sunk Screw	84	501973	Nameplate
41	501934	Trigger Pivot Pin	85	501302	Warning Label
42	501935	Housing	86	501140	Housing Label-left
43	501936	O-Ring	87	501141	Housing Label-right
44	501937	End Cap	88	501995	Tap Bolt