





No.:	Code:	Name:	No.:	Code:	Name:
01	617920	CAP ASSEMBLY	46	576320	ACTUATOR
02	617539	SCREW	47	576321	INDICATOR
03	617558	BUSHING	48	576323	SPRING
04	617504	EXHAUST COVER	49	576506	PIN
05	617548	SEAL	50	576507	SCREW
06	615719	SPRING	51	617073	WASHER
07	617521	O RING	52	576325	STOPPER
08	617510	PISTON HEAD VALVE	53	576326	SPRING
09	617527	O RING	54	617077	O RING
10	617507	PISTON STOPPER	55	576361	O RING
11	617550	GASKET	56	576327	SPRING
12	576351	DRIVER ASS.	57	576362	SCREW
13	576352	O RING	58	576363	WASHER
14	617552	CYLINDER SEAL	59	576328	LEVER
15	576504	WASHER	60	617095	O RING
16	576353	CYLINDER ASS.	61	576329	FEED PAWL
17	617524	O RING	62	617081	PIN
18	576354	CYLINDER RING	63	576330	FEED PISTON
19	617522	O RING	64	617084	O RING
20	617525	O RING	65	617631	SPRING
21	617921	BUMPER	66	617085	FEED PISTON STOP
22	617529	PIN	67	617087	SPRING COLLAR
23	617922	BODY	68	617088	C RING
24	617526	O RING	69	576494	PU RING
25	617529	PIN	70	576331	CHECK PAWL
26	617549	GASKET	71	617058	RUBBER WASHER
27	576355	END CAP	72	576332	SPRING
28	576356	SCREW	73	576348	DOOR
29	617138	SCREW	74	576334	PIN
30	617057	LOCK NUT	75	576335	SLEEVE
31	617485	TRIGGER VALVE	76	617069	SPRING
32	617514	SPRING	77	617071	PIN
33	617502	SEQUENTIAL TRIGGER	78	576508	PIN
33	575921	CONTACT TRIGGER KIT	79	576509	SPRING
34	576357	GUIDANCE	80	576510	SUPPORT
35	576358	SPRING	81	576511	O RING
36	617498	BRACKET	82	617042	SCREW
37	576359	UPPER WPC	83	576349	MAGAZINE ASS.
38	617137	SCREW	84	576512	MODEL LABEL SEQUENTIAL
39	576314	SCREW	84	575915	MODEL LABEL CONTACT
40	617459	WASHER	85	576513	MAGAZINE SUPPORT ASS.
41	576346	COVER	86	576514	PROTECTOR
42	576505	NOSE ASS.	87	576364	SCREW
43	576317	STOP LEVER	88	576515	PROTECTOR
44	576318	FLAT SPRING	89	576338	AIR PLUG
45	576319	SPRING	90	576516	CONTACT ARM ASS.